


CUSTOM STANCHION BASE COVERS

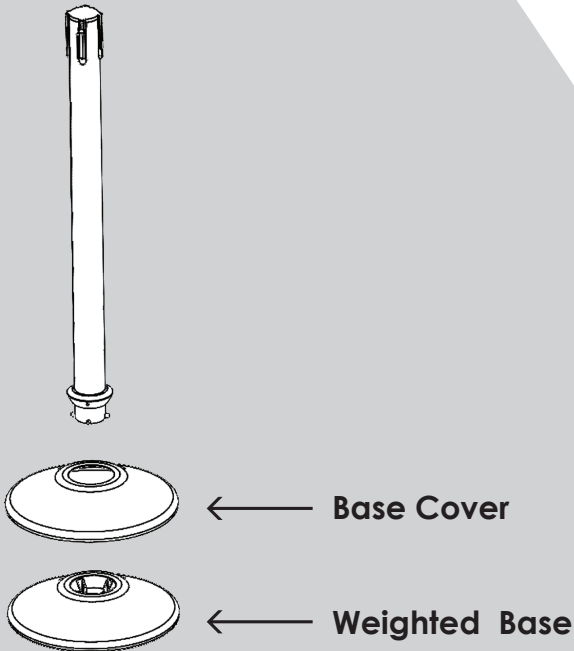

Instructions:

With the post removed from base, place cover over base. Next, reassemble the post by aligning the pin at the bottom of the post to the cross cutout in the weighted base. Once aligned, push post down completely and rotate post 1/8 of a turn to lock post/pin in place.

NOTE: If stacking weighted bases, remove base covers to prevent cracking.